


PURE

EVOKE Flow Owner's Manual

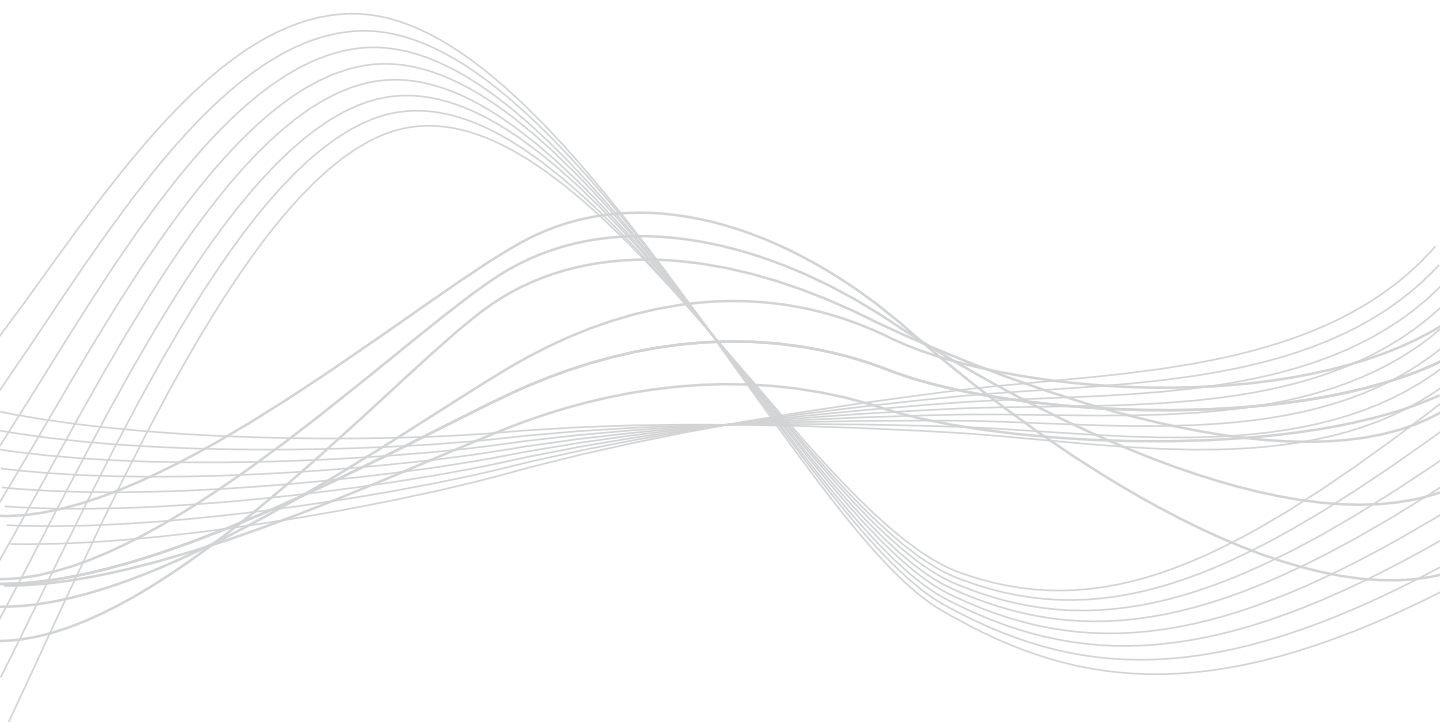

Copyright

Copyright 2008 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Portions Copyright ©2004 Intel Corporation.

Copyright

Copyright 2008 by Imagination Technologies Limited. Alle Rechte vorbehalten. Kein Teil dieser Publikation darf ohne ausdrückliche und schriftliche Zustimmung von Imagination Technologies Limited in irgendeiner Form (elektronisch, mechanisch, magnetisch, manuell oder auf andere Weise) kopiert, verteilt, übermittelt, überschrieben, in einem Suchsystem gespeichert, in eine andere natürliche oder Computersprache übersetzt oder Dritten zugänglich gemacht werden.

Trademarks

EVOKE Flow, the EVOKE Flow logo, PURE, the PURE logo, PURE Digital, the PURE Digital logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance. All other product names are trademarks of their respective companies. Version 1 August 2008.

Warenzeichen

EVOKE Flow, das EVOKE Flow Logo, PURE, das PURE Logo, PURE Digital, das PURE Digital Logo, Imagination Technologies und das Imagination Technologies Logo sind Warenzeichen oder eingetragene Warenzeichen von Imagination Technologies Limited. Alle anderen Produktnamen sind Warenzeichen ihrer jeweiligen Besitzer. Version 1. August 2008.

Copyright

Copyright 2008 Imagination Technologies Limited. Tous droits réservés. Aucune partie de la présente publication ne doit être copiée ou diffusée, transmise, retranscrite, stockée dans un système de récupération de données ou traduite, que ce soit dans une langue humaine ou dans un langage informatique, sous quelque forme et par quelque moyen que ce soit, électronique, mécanique, magnétique, manuel ou autre, ou encore diffusée auprès de tiers sans autorisation écrite expresse de Imagination Technologies Limited.

Copyright

Copyright 2008 by Imagination Technologies Limited. Tutti i diritti riservati. Nessuna parte della presente pubblicazione EVOKE Flow può essere copiata o distribuita, trasmessa, trascritta, memorizzata in un sistema di archiviazione EVOKE Flow, o tradotta in un formato normalmente comprensibile, in qualsiasi forma o con qualsiasi mezzo, elettronico, meccanico, magnetico, manuale o altro, o divulgata a terzi par ti senza il permesso scritto di Imagination Technologies Limited.

Marques commerciales

EVOKE Flow, le logo EVOKE Flow, PURE, le logo PURE, PURE Digital, le logo PURE Digital, Imagination Technologies et le logo Imagination Technologies sont des marques commerciales ou des marques déposées de Imagination Technologies Limited. Tous les autres noms de produits sont des marques commerciales de leurs détenteurs respectifs. Version 1 er août 2008.

Marchi

EVOKE Flow, il logo EVOKE Flow, PURE, il logo PURE, PURE Digital, il logo PURE Digital, Imagination Technologies e il logo Imagination Technologies sono marchi o marchi registrati di Imagination Technologies Limited. Tutti gli altri nomi di prodotti sono marchi di proprietà delle rispettive società. Version 1. agosto 2008.

Copyright

Copyright 2008 tilhører Imagination Technologies Limited. Alle rettigheder forbeholdes. Ingen dele af denne publikation må kopieres eller distribueres, transmitteres, omskrives, gemmes i et system, hvor den kan hentes, eller oversættes til menneskeligt forståeligt sprog eller computersprog, i nogen som helst form eller med nogen som helst midler, det være sig elektroniske, mekaniske, magnetiske, manuelle eller på anden måde, eller fremvises til tredje parter uden udtrykkelig, skriftlig tilladelse fra Imagination Technologies Limited.

Copyright

Copyright 2008 door Imagination Technologies Limited. Alle rechten gereserveerd. Geen enkel gedeelte van deze publicatie mag gekopieerd of gedistribueerd, uitgezonden, overgeschreven, opgeslagen in een retrieval system of vertaald in om het even welke menselijke of computertaal, in geen enkele vorm of door geen enkel middel, elektronisch, mechanisch, magnetisch, manueel of anders of bekend gemaakt aan derde partijen zonder de uitdrukkelijke geschreven toestemming van Imagination Technologies Limited.

Varemærker

EVOKE Flow, EVOKE Flow-logoet, PURE, PURE-logoet, PURE Digital, PURE Digital-logoet, Imagination Technologies og Imagination Technologies logoet er varemærker, der tilhører Imagination Technologies Limited. Alle andre produktnavne er varemærker, der tilhører deres respektive virksomheder. Version 1. August 2008.

Handelsmerken

EVOKE Flow, het EVOKE Flow logo, PURE, het PURE logo, PURE Digital, het PURE Digital logo, Imagination Technologies en het Imagination Technologies logo zijn handelsmerken van geregistreerde handelsmerken van Imagination Technologies Limited. Alle andere productnamen zijn handelsmerken van hun respectieve firma's. Versie 1. augustus 2008.

Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please visit www.pure.com/register to register your product with us. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual. If you need to return your product please use the original packaging and include all parts and accessories. We reserve the right to refuse incomplete or badly packaged returns.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.


Acknowledgement of License Agreements

Portions of the code used in EVOKE Flow are subject to the following GPL and LPGL licenses and copyright: GNU General Public License Version 2 (GPLv2). For the full text of the license agreement go to:

<http://www.gnu.org/licenses/gpl-2.0.txt>

GNU Lesser General Public License Version 2.1 (LGPLv2.1). For the full text of the license agreement go to:

<http://www.gnu.org/licenses/lgpl-2.1.txt>

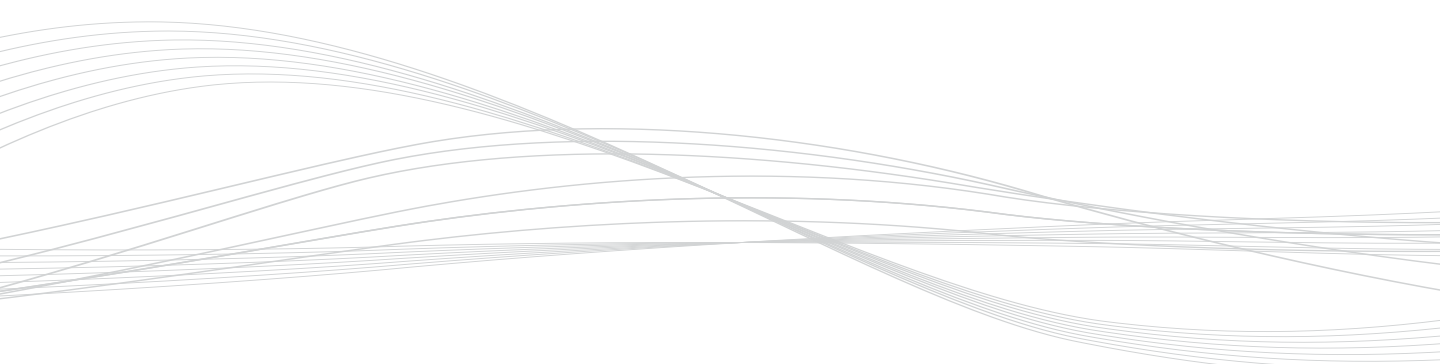



Safety instructions

Keep the radio away from heat sources.

Do not use the radio near water.

Avoid objects or liquids getting into the radio.

Do not remove screws from or open the radio casing.

Fit the mains adaptor to an easily accessible socket, located near the radio and ONLY use the mains power adaptor supplied. Always switch the unit off and disconnect it from mains power before inserting or removing a ChargePAK.



Istruzioni di sicurezza

Tenere la radio lontana da fonti di calore.

Non utilizzare la radio vicino all'acqua.

Evitare che oggetti o liquidi penetrino nella radio.

Non rimuovere le viti né aprire l'involucro della radio.

Collegare l'adattatore di rete ad una presa della corrente facilmente accessibile, situata vicino alla radio e utilizzare ESCLUSIVAMENTE l'adattatore di rete fornito. Prima di inserire o rimuovere un ChargePAK, è indispensabile spegnere l'unità e scollegarla dalla rete di alimentazione.



Sicherheitshinweise

Halten Sie das Radio fern von Heizquellen.

Benutzen Sie das Radio nicht in der Nähe von Wasser.

Verhindern Sie, dass Gegenstände oder Flüssigkeiten in das Radio gelangen.

Entfernen Sie keine Schrauben vom Gehäuse und öffnen Sie dieses nicht.

Schließen Sie das Netzteil an eine leicht erreichbare Steckdose in der Nähe des Radios an, und benutzen Sie AUSSCHLIESSLICH das mitgelieferte Netzteil. Schalten Sie das Gerät immer aus und trennen Sie es vom Netz, bevor Sie ein ChargePAK einsetzen oder entnehmen.



Sikkerhedsforskrifter

Hold radioen på afstand af varmekilder.

Brug ikke radioen i nærheden af vand.

Undgå at der kommer genstande eller væske i radioen.

Fjern ikke skruer fra og åbn ikke radiokabinettet.

De bør tilslutte strømforsyningen til et lettilgængeligt strømudtag tæt på radioen. De bør KUN bruge den medfølgende strømforsyning. Sluk altid for enheden, og afbryd den fra hovedstrømforsyningen, før du isætter eller fjerner ChargePAK.



Consignes de sécurité

Tenir la radio éloignée de toute source de chaleur.

Ne pas utiliser la radio à proximité d'un point d'eau.

Éviter que des objets ou des liquides ne pénètrent à l'intérieur de la radio.

Ne pas ouvrir le boîtier de la radio ou enlever les vis.

Branchez l'adaptateur sur une prise de courant facilement accessible, à proximité de la radio et utilisez UNIQUEMENT l'adaptateur fourni. Toujours éteindre la radio et la débrancher du secteur avant d'insérer ou de retirer le ChargePAK.



Veiligheidsinstructies

Houd de radio uit de buurt van warmtebronnen.

Gebruik de radio niet in de buurt van water.

Vermijd dat voorwerpen of vloeistoffen in de radio terecht komen.

Verwijder geen schroeven uit de omkasting van de radio en open het niet.


Steek de lichtnetadapter in een gemakkelijk toegankelijk stopcontact in de buurt van de radio en gebruik ALLEEN de meegeleverde spanningsadapter voor het lichtnet. Voordat u een ChargePAK invoert of verwijdert, moet u altijd eerst de unit uitzetten en de stekker uit het stopcontact halen.


Information about internet radio and broadband download limits

You should be aware that listening to internet radio stations, listen again programmes, podcasts and PURE sounds will contribute towards any download limit on your broadband account set by your Internet Service Provider (ISP). You can find out if you have a download limit on your broadband account by checking the terms and conditions of your account or by contacting your ISP. Please note that listening to DAB or FM, or streaming your own music files using the 'Media player' source, will not contribute towards any download limit on your account.

Help! I see 'Time not available'

If you see the message 'Time not available' when the radio is in standby you need to select the 'DAB radio' audio source and listen to a DAB station for a few minutes to acquire the current time. Providing you have a DAB signal, EVOKE Flow will keep the time up-to-date.

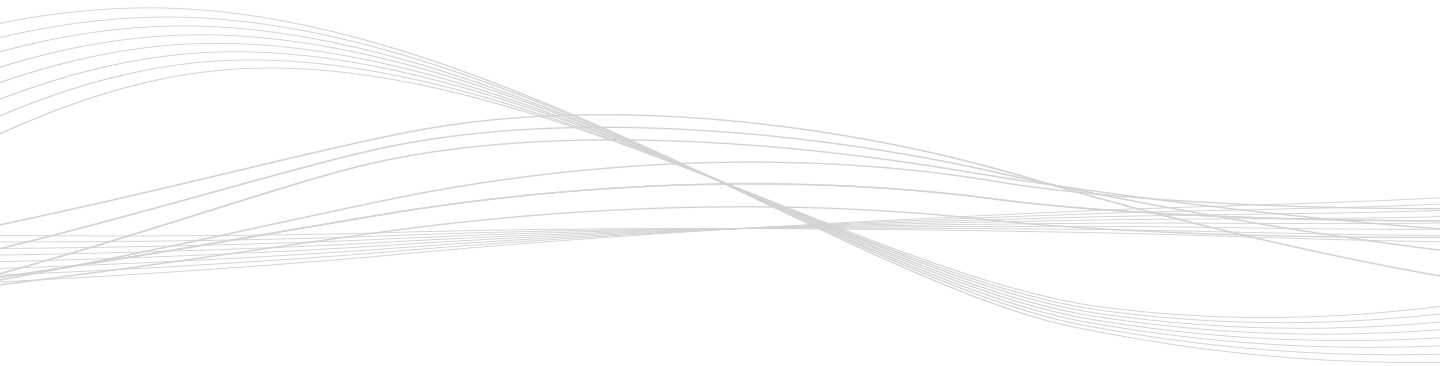

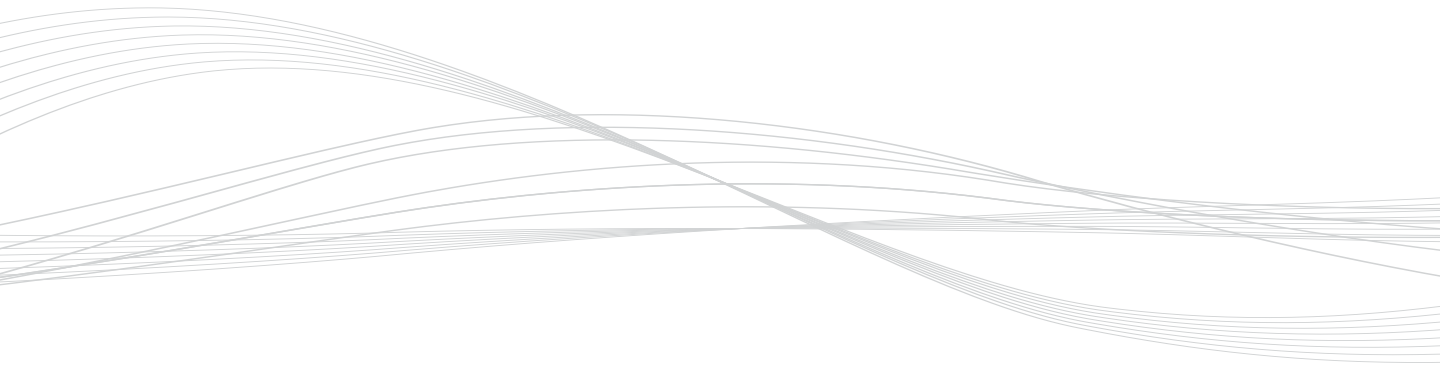

Contents

1	Discover EVOKE Flow	9
1.1	Here's what you'll need	9
1.2	Switching on EVOKE Flow for the first time	9
1.3	Key phrases used in this manual	10
1.4	Overview of controls and sensors	11
1.5	Quick guide to rear panel	12
1.6	Quick guide to the display	13
1.7	Quick Guide to common functions	13
1.8	Using Fast Scroll	14
1.9	About the PURE Lounge	15
2	Listening to DAB radio	16
2.1	Switching to DAB Radio source	16
2.2	Changing the station	16
2.3	Using presets	17
2.4	Options available in DAB source	18
3	Listening to Internet radio and more	19
3.1	Connecting EVOKE Flow to your wireless network for the first time	19
3.2	Listening to and searching for online audio content	22
3.3	Opening groups of items	25
3.4	Adding and viewing your Favourites	25
3.5	Pausing and seeking	26
3.6	Options available in The Lounge source	27
3.7	Wi-Fi settings	27
4	Listening to Media player	29
4.1	Setting up Media player for the first time	29
4.2	Playing albums, tracks and playlists	30
4.3	Skipping, pausing and seeking within tracks	31
4.4	Searching for an artist, track or album	32
4.5	Options available in Media player source	33

5	Listening to FM radio	34
5.1	Selecting the 'FM radio' audio source	34
5.2	Changing the station	34
5.3	Using presets	34
5.4	Options available in FM source	35
6	Listening to an Auxiliary device	36
6.1	Connecting an iPod® or MP3 player	36
6.2	Selecting the Auxiliary input source	36
7	Universal options	37
7.1	Setting the alarm and timers	37
7.2	Snoozing and cancelling the alarm	38
7.3	Changing the information shown on screen	39
7.4	Adjusting the screen brightness and duration	40
7.5	Upgrade your radio's firmware	41
7.6	Factory reset	41
8	Help and advice	42
8.1	Steps to ensure successful connection to your wireless network	42
8.2	Steps to ensure successful listening to online audio content	42
8.3	Steps to ensure successful media streaming	42
8.4	Steps to ensure successful DAB and FM listening	43
9	Technical specifications	44

1 Discover EVOKE Flow

Welcome to EVOKE Flow, a connected radio for the digital home. This chapter explains how to get your new radio up and running, outlines the controls and explains some phrases used in this manual.

1.1 Here's what you'll need

■ To listen to online audio content (internet radio, listen again programmes, podcasts and PURE sounds) and stream your music collection you'll need the following:

- ✓ A broadband internet connection (minimum speed 0.5 MB). If you already surf the web at home, then your internet connection is active and working correctly.
- ✓ A wireless router, also called a wireless access point.
- ✓ If your network is secured, you'll need the WEP, WPA or WPA2 key or password for your network (for help see '[What is a WEP key?](#)').
- ✓ A registration code from www.thelounge.com*. To get a registration code, go to www.thelounge.com and click on 'Connect my PURE radio' to register your details and receive a registration code by e-mail, which you'll be asked to enter into EVOKE Flow as part of the setup process.

1.2 Switching on EVOKE Flow for the first time

- 1 If you have a ChargePAK E1 rechargeable battery connect it to EVOKE Flow before plugging the radio into the mains. A ChargePAK E1 provides up to 24 hours of portable and wire-free listening when fully charged. If you don't have a ChargePAK E1, go to step 2.
Note | To order a ChargePAK E1 visit www.pure.com/shop or contact [your local PURE dealer](#).
- 2 Extend the aerial fully. You need to extend the aerial when listening to DAB and FM, but it's not required when listening to online audio content or streaming your music files.
- 3 Insert the connector of the supplied mains adapter into the 6V DC input on the rear of the radio.
- 4 Plug the mains adapter into the mains supply and wait for the radio to switch on.
- 5 The EVOKE Flow screen is displayed for a short period.
- 6 The Source screen is displayed, which shows the 5 audio sources you can listen to on EVOKE Flow. Each audio source is explained in a separate chapter of this manual: [2 Listening to DAB radio](#); [3 Listening to internet radio and more](#); [4 Listening to Media player](#); [5 Listening to FM radio](#); and [6 Listening to an Auxiliary device](#).
7. To get started, push the Select dial to select 'DAB radio' and read the rest of this chapter for an overview of how to operate the product.


* We recommend that you register with the PURE Lounge and connect your radio in order to save more than 10 favourites and organise your favourites into separate folders.

1.3 Key phrases used in this manual

The following key phrases and associated illustrations are used in this manual:



‘Highlight’

Rotate the Select dial until the desired item is highlighted.

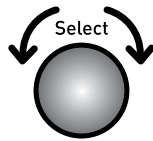


‘Select’

Push the Select dial to select the desired item.

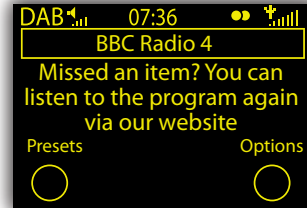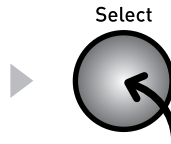


‘Tap’

Touch one of the keys or the SnoozeHandle™ with a finger or thumb.

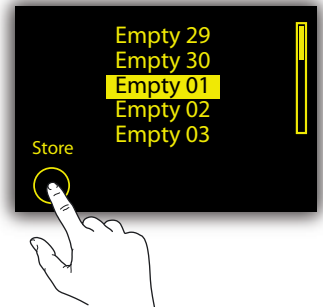

‘Press and hold’

Touch one of the keys and leave your finger or thumb held down until the action is complete.

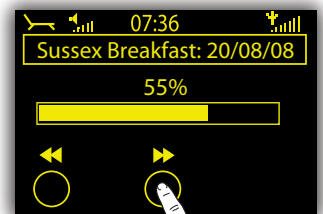


1.4 Overview of controls and sensors



- 1 Context-sensitive touch keys. The function is displayed on screen above the relevant key and changes depending on the current screen.
- 2 Back key (⏪). Tap to display the Source screen then choose between DAB radio, The Lounge, Media player, FM radio and Auxiliary input. Tap when browsing stations to go back up to the previous list. Tap in the Options menu to go back up to the previous screen.
- 3 Volume/mute dial. Rotate right and left to increase and decrease the volume. Push to mute the audio and push again to unmute.
- 4 Select dial. Rotate to browse the current list of items and press to select. Browse options and press to select. Push to pause a media track, podcast or programme
- 5 Standby touch key (⏻). Tap ⏻ followed by ⏪ Ok to switch the radio on; do this again to switch the radio into standby (or off if powered by a ChargePAK E1).
- 6 SnoozeHandle™ (does not work when the radio is battery powered). Tap to snooze the alarm for 9 minutes. Grip and hold to brighten the display to maximum brightness for 3 seconds.
- 7 Light sensor. Adjusts the display brightness according to the light levels in your room (only works when the Brightness level is set to 'Automatic'). Make sure the sensor is not covered or blocked.


1.5 Quick guide to rear panel

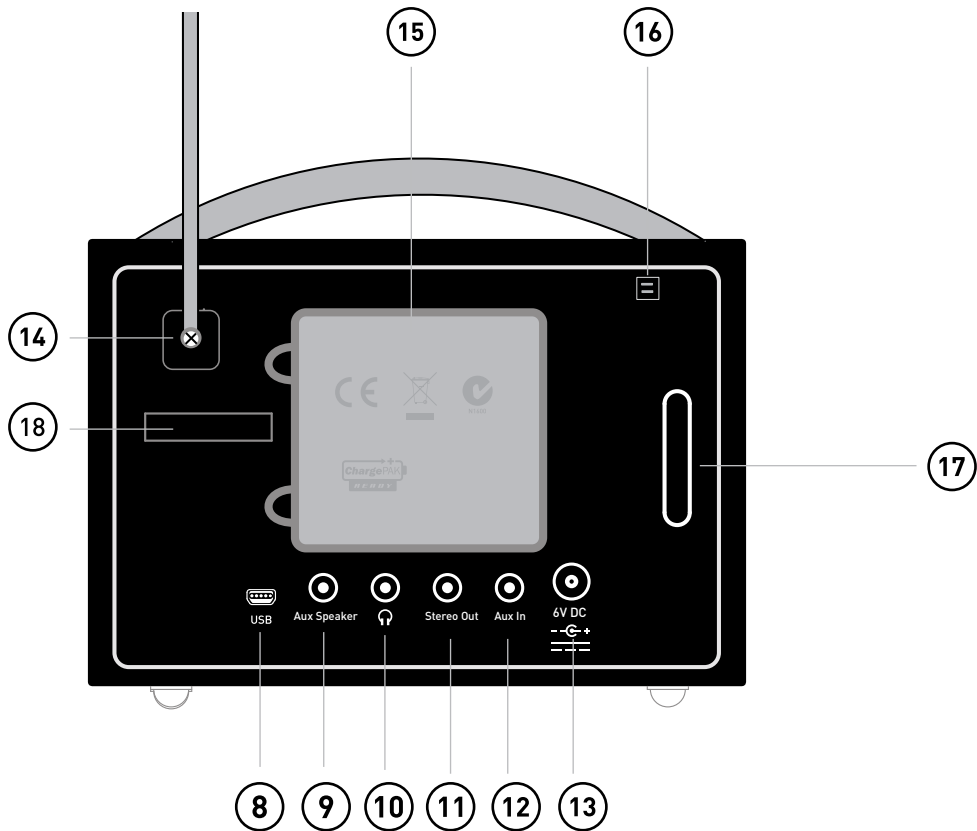

- | | |
|---|--|
| <p>8 USB connector (mini A to mini-B type) for upgrading the radio's firmware when a wireless internet connection is not available.</p> <p>9 Input connection for the S-1 Flow auxiliary speaker To purchase the S-1 Flow auxiliary speaker, go to www.pure.com/shop or contact your local PURE dealer.</p> <p>10 Output connection for headphones (3.5mm).</p> <p>11 Output connection to an external amplifier using a suitable 3.5mm-to-RCA cable (not supplied).</p> <p>12 Input connection for iPod, MP3 player, etc. using a 3.5mm aux cable (not supplied) or</p> | <p>13 6VDC input connection for supplied mains adapter.</p> <p>14 Screw to loosen and remove aerial if a replacement is needed due to damage.</p> <p>15 Compartment for ChargePAK E1 rechargeable battery (sold separately).</p> <p>16 Clip to house aerial when not required (for example, when listening to internet radio).</p> <p>17 Acoustically tuned bass reflex port (do not cover).</p> <p>18 Serial number (needed for connecting your radio at the Lounge).</p> |
|---|--|

1.6 Quick guide to the display

The clock is automatically set and updated. If you cannot see the time, tune to a DAB station for a few minutes (see [Help](#))

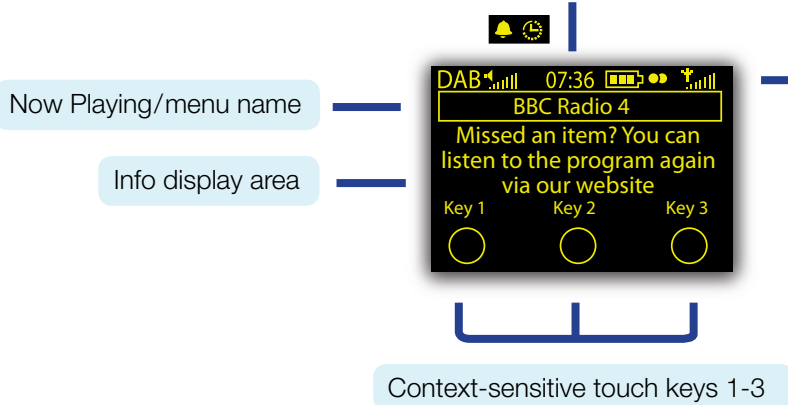

Icon bar (from left to right):

Audio source: DAB, (The Lounge), MP (Media player), FM or AUX (Auxiliary input).

Mute indicator

Volume level

Alarm/timer set indicators

Clock

ChargePAK battery level (animates when charging, switches off when charged)

Stereo indicator

Signal strength bar: indicates reception level in DAB and FM source and wireless network strength in The Lounge and Media player source.




1.7 Quick Guide to common functions

■ How to change the audio source

EVOKE Flow has 5 audio sources: DAB radio, The Lounge (online audio content), Media player, FM radio and Auxiliary input. To change the audio source:

- 1 Tap until the Source screen is displayed.
- 2 Highlight and select a new audio source, or tap to exit the Source screen.

Changing the audio source

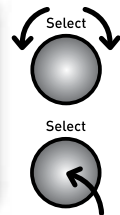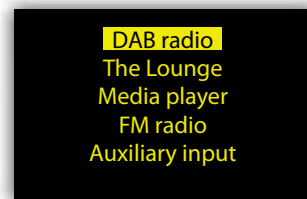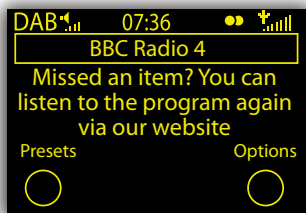

The source screen

■ About the context-sensitive touch keys

EVOKE Flow has 3 context-sensitive touch keys. The function of each touch key is displayed above the key and changes depending on what you are listening to or which menu is active. If the yellow light around a particular key is not lit, then the key has no function in the current screen.

■ Using the Back Arrow key to go back up to a previous menu

Tap when browsing stations and other content, or when in a menu, to go up to the previous screen. Press and hold at any time to return to the 'now playing' screen for the currently selected audio source.


1.8 Using Fast Scroll

Fast Scroll makes it quicker and easier to browse through large lists of radio stations, listen again programmes and podcasts, which can sometimes be thousands of items in length.

■ Using Fast Scroll to quickly scroll down a list of content

- 1 To start Fast Scroll quickly rotate the Select dial in the direction you want to scroll. The list will begin to scroll slowly in the chosen direction as indicated by the arrows in the scroll bar.

*Starting
Fast Scroll*

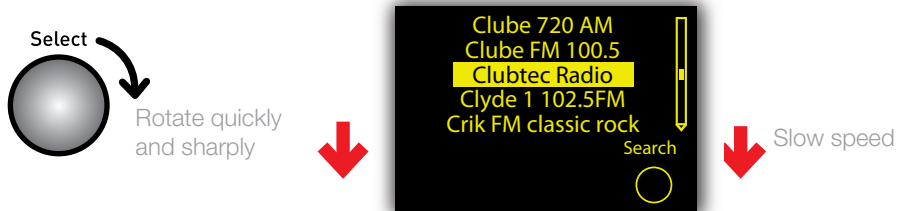


- 2 Increase the scroll speed by rotating the Select dial in the direction of the scroll.

*Speeding up
Fast Scroll*



- 3 Spotted a station that looks interesting? Stop Fast Scroll by rotating the Select dial in the opposite direction or pushing the Select dial.

*Stopping
Fast Scroll*

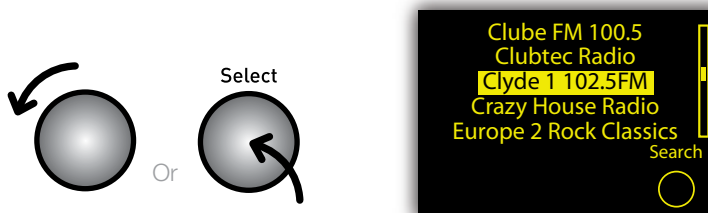

- 4 Highlight and select the station you want to listen to or start Fast Scroll again as described above. When you reach the end of a list Fast Scroll will 'wrap around' to the beginning again.

Note | When using Fast Scroll to browse a list of online audio content you may see the message 'Loading...' instead of the station name. This happens because the list is scrolling faster than items can be collected over your wireless network.

1.9 About the PURE Lounge

To get the most from EVOKE Flow connect your radio to the PURE Lounge (www.thelounge.com), your online gateway to the world of online audio content.* The Lounge contains thousands of internet radio stations, podcasts and listen again programmes available to listen to in the comfort of your living room, bathroom, garden, garage – wherever you're in range of your wireless network. Visit the Lounge now to register your details and connect your radio to receive a registration code, which is required to enjoy all the features of the Lounge and to save more than 10 favourite stations on your EVOKE Flow.

The Lounge home page



The Lounge search page




* We recommend that you register with the PURE Lounge and connect your radio in order to save more than 10 favourites and organise your favourites into separate folders.

2 Listening to DAB radio

This chapter explains how to operate EVOKE Flow when listening to DAB radio, including changing stations, storing a list of preset stations and changing settings.

Note | When listening to DAB the aerial should be fully extended to ensure the best possible signal quality.

2.1 Switching to DAB Radio source

- 1 Tap  until the source screen is displayed.
- 2 Highlight and select 'DAB radio'.
- 3 The first time you use DAB radio (or when you use DAB radio after a factory reset) an autotune will scan for all the stations you can receive, which takes about a minute. The radio will then tune to a DAB station.

2.2 Changing the station

■ To change the station:

- 1 Rotate the Select dial to scroll through the available DAB stations.
- 2 Highlight the station you want to listen to.
- 3 Push the Select dial to tune in to the highlighted station.

Changing the station


 


Note | A station which is also broadcasting a secondary service has the symbol >> after its name and the secondary service is listed immediately below the station with << before its name. An example of a secondary service in the UK is 5Live Sports Extra. A station which is currently unavailable is listed with '?' before its name.


2.3 Using presets

You can store a list of preset DAB stations and update it as often as you like.



■ To store a DAB station as a preset

- 1 Select the DAB station you want to add to the preset list.
- 2 Tap  Presets.
- 3 Rotate the Select dial to highlight a preset slot between 1 and 30, for example 'Empty 01'.
- 4 Tap  Store to store the station to the relevant slot on the preset list.

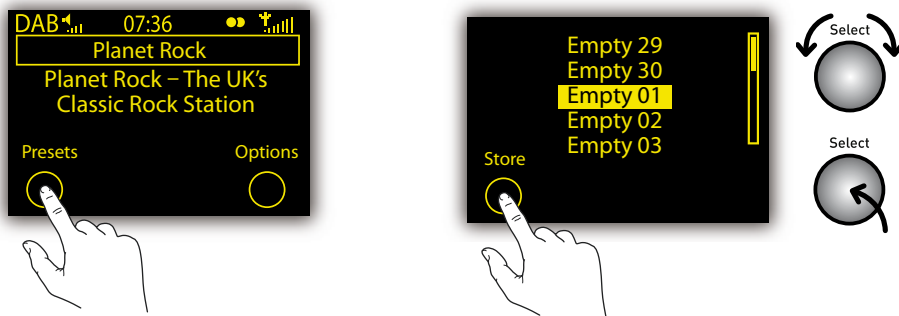Storing a preset station



■ To select a station from the preset list:

- 1 When listening to a DAB station tap  Presets.
- 2 Highlight a preset slot between 1 and 30. Presets are labelled with the station name if a station has been stored or 'Empty...' if nothing is stored.
- 3 Tap  Listen to tune in to the preset station (or push the Select dial).


Selecting a preset station



2.4 Options available in DAB source

When listening to a DAB station tap  Options and highlight and select 'DAB settings'. For an explanation of the other settings available see [Chapter 7, Universal Options](#).

■ Autotune

Highlight and select 'Autotune' to search for new DAB stations and remove inactive stations. You can stop the Autotune before it's finished by tapping  Cancel. When the autotune is finished EVOKE Flow will tune to the last station you listened to.

■ Station order

Highlight and select 'Station order' to change the order in which DAB stations are displayed as follows:

Alphanumeric	Lists all stations in alphanumeric order (0-9, A-Z).
Active station	Lists stations that are active (currently broadcasting) at the top of the station list.
Multiplex	Lists stations in groups according to their Multiplex (a group of national or local stations broadcast by the same operator).

■ Trim station list

Highlight and select 'Trim station list' to remove inactive DAB stations (marked '?') from the station list.

■ Dynamic Range Control

Highlight and select 'Dynamic Range Control' to change the Dynamic Range Control (DRC) settings. DRC makes the quieter sounds in a DAB broadcast easier to hear at a low volume or in a noisy environment.

Off	Any DRC broadcast sent by the station is ignored.
Half	DRC level is set to half that sent with the broadcast
Full (default)	DRC level is applied as sent with the broadcast.

Note | Only certain stations broadcast DRC, including BBC Radio 3 in the UK.

3 Listening to Internet radio and more


This chapter explains how to listen to EVOKE Flow in 'The Lounge' source. You can search for exciting stations that match your interests, catch up with radio programmes you've missed, discover the world of podcasting or listen to a selection of PURE sounds designed to stimulate, inspire and relax.

3.1 Connecting EVOKE Flow to your wireless network for the first time


■ Register at the PURE Lounge and connect your radio to receive your registration code

If you haven't already done so, go to www.thelounge.com and click on 'Connect my PURE radio' to register at the Lounge and connect your radio for a more personalised listening experience. Once the radio is connected to the Lounge, you can add more than 10 Favourites, and log-in on your PC to organise your Favourites into separate folders. As part of the registration process you will be e-mailed a registration code, which you enter into your radio to connect it to the Lounge (see below).*

■ Select 'The Lounge' audio source

- 1 Tap  until the Source screen is displayed.
- 2 Highlight and select 'The Lounge'.


Selecting
The Lounge

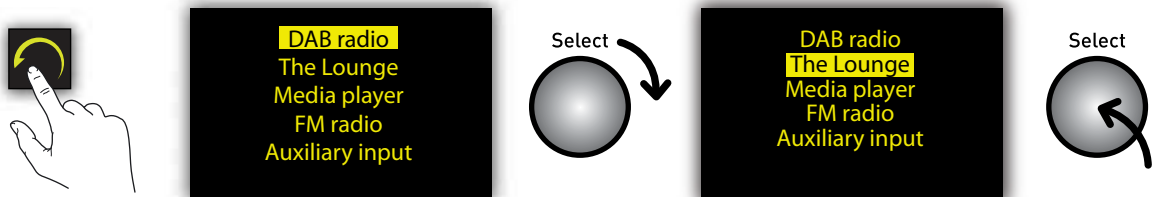


■ Select your wireless network from the list

- 1 The first time you select the 'The Lounge' source EVOKE Flow will scan for all the visible wireless networks in the surrounding area and display them in a list.

Scanning for
wireless networks

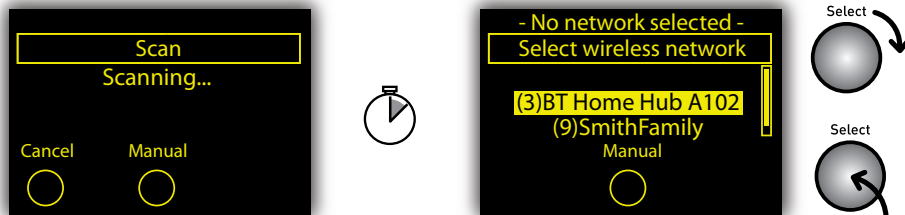


Note | If you want to enter your wireless network details manually tap  Manual .
The strength of each wireless network is shown in brackets from 1 (weak) to 10 (strong).

* We recommend that you register with the PURE Lounge and connect your radio in order to save more than 10 favourites and organise your favourites into separate folders.

- Highlight and select the name of your wireless network from the list.

Selecting a wireless network

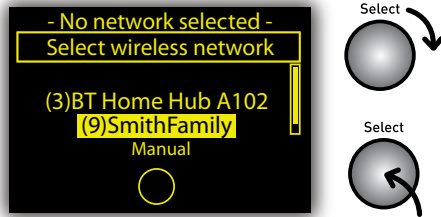

Help! "I can't find my wireless network"

If you see the message 'No networks found' or 'Wireless network error' try moving your radio nearer to the router and moving the router to a higher position (eg, on a shelf) away from metal objects. Tap Retry to re-scan for visible networks.


If networks are displayed but your wireless network is not listed try the above advice and then tap and select 'Connection wizard' to re-scan for visible networks.

If your network is configured as invisible, you can enter the network settings manually by tapping Manual and following the steps. For more help see [Manual setup](#).

■ Enter your WEP or WPA/WPA2 key or password

- If you see 'Enter key or password' enter the WEP, WPA or WPA2 key or the password for your wireless network. Rotate the Select dial to highlight characters and push to enter; tap Delete to erase characters (press and hold to erase all); tap More... to see lower-case letters; and tap Save to finish (Save only appears when you've entered a compatible number of characters).

Key or password entry screen

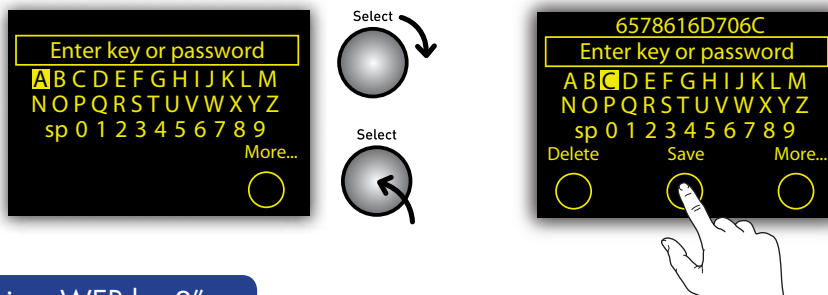


"Help! What is a WEP key?"

A WEP, WPA or WPA2 key is a sequence of letters and numbers that prevents unauthorized access to a secured wireless network. Devices like EVOKE Flow need the encryption key in order to connect to your wireless network. It is usually 26 or 64 characters long depending on how your wireless network is configured and in some cases a shorter password can also be used instead of a full key.

You may have noted down the key or password when you set up your broadband account and/or wireless network (or you could ask the person who set up your wireless network).

If you can't find your key or password, don't panic. See [Chapter 8, Help and Advice](#) for more help on finding this important information.

Note Depending on your wireless network configuration, entering only the password may not be sufficient to connect. If this is the case, EVOKE Flow will try to connect to your network and then display the 'Unable to connect' menu. If this happens, highlight and select 'Change key or password' and try entering the full WEP, WPA or WPA2 encryption key and tap  Save.

- 2 Wait for EVOKE Flow to connect to your wireless network, which may take a minute or two.






"Help! I see Unable to connect"

If you see the message 'Unable to connect' highlight and select one of the following options:

- | | |
|-------------------------|---|
| Retry connection | Attempts to reconnect to the selected network using the same encryption key or password. |
| Select another network | Re-scans and displays the list of visible wireless networks again. You can select a new one if, for example, you've moved EVOKE Flow from one location to another, eg, from home to the office. |
| Change key or password | Allows you to enter a new WEP or WPA/WPA2 key or password if you think you've made a mistake. Once you've done this, select 'Retry connection' to try to connect with the new key/password. |
| Change encryption mode | Change the encryption mode between 'WEP', 'WPA (PSK)', 'WPA2 (PSK)' or 'None'. EVOKE Flow automatically detects the encryption mode for your network, but you can change this option and then select 'Retry connection' if you think the mode is specified incorrectly. |
| Change IP configuration | Choose between 'DHCP' or 'Static' (see IP address) |

Finally, enter your registration code for the Lounge*

- 1 When you see the Registration screen tap  Enter and enter your registration code, which was sent to your e-mail address when you connected your radio to the Lounge (www.thelounge.com). Rotate the Select dial to highlight characters and push to select; tap  Delete to erase characters (press and hold to erase all); and tap  Save to finish.
- 2 Wait for a moment until you see the Lounge home screen. Well done! The world of internet radio is now at your fingertips: read on to find out how to tune in.

Entering a registration code



*We recommend that you register with the Lounge and connect your radio to save over 10 Favourites and organise your Favourites into folders. However, if you'd rather connect to the Lounge without registering, tap 'Skip'. You can always register later and then select 'Register with the Lounge' from the Lounge options menu to enter your registration code.


3.2 Listening to and searching for online audio content

We've organised all the online audio content available at the Lounge into 5 content categories: My favourites (empty until you start adding Favourites), Stations, Listen again, Podcasts and PURE sounds. You can search each content category to find something that interests you. For example, let's say you're learning Spanish and you like dance music. You can search our list of internet radio stations to only display Spanish radio stations playing dance music.

■ Select a content category

- 1 When you enter 'The Lounge' source for the first time the Lounge home screen is displayed.

*the Lounge
home screen*

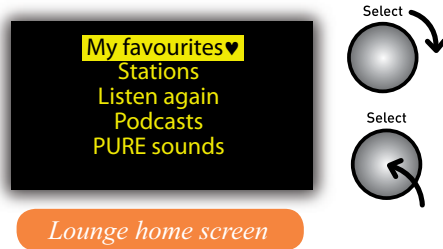


- 2 Highlight and select one of the content categories described in the table below:

My favourites ♥	Listen to your favourite stations, listen again programmes, podcasts or PURE sounds. You can add items to your favourites when listening on EVOKE Flow or when listening on your computer at the Lounge
Stations	Search radio stations from around the world broadcasting over the internet
Listen again	Search archived radio programmes available to listen to (or 'stream') online for a set or indefinite period of time after live broadcast
Podcasts	Search thousands of Podcasts. From the sublime to the ridiculous, these are pre-recorded audio shows which can be posted online by virtually anyone about virtually anything imaginable, but subjects might include comedy, arts and technology
PURE sounds	Listen to a hand picked selection of sounds to stimulate, inspire and relax.

*Selecting
'Stations'*




3. Every station, listen again programme, podcast or PURE sound in the content category is displayed. Tap  Search to enter some search terms and narrow down this list to find something you like (see the next page).

■ Search for a station, listen again programme or podcast

- 1 Tap  Search from the content list to display the Search screen.


Displaying the Search screen

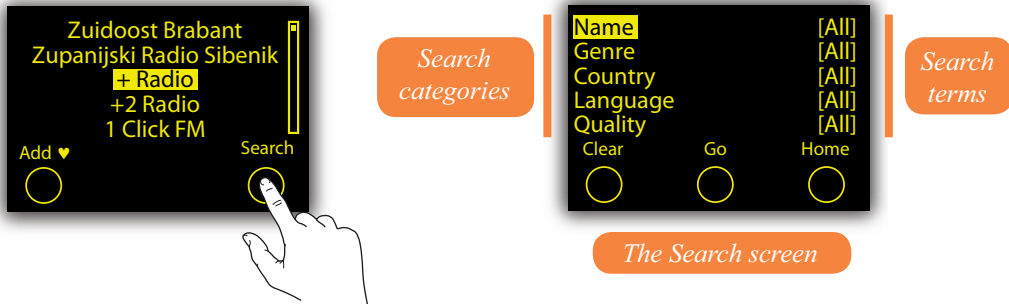


- 2 Highlight and select a search category and then rotate the dial to browse the available search terms and push to select. You can search by any combination of these search categories:



- Name Search by all or part of the name of a station, podcast or programme.
- Genre Choose to display only content from a certain genre, eg, Jazz.
- Country Choose to display only content broadcasting from a particular country.
- Language Choose to display only content broadcasting in a particular language.
- Quality Choose to display only content that matches your desired audio quality. Quality ratings are from 1 to 5, where 1 is low quality, 3 is medium and 5 is excellent.

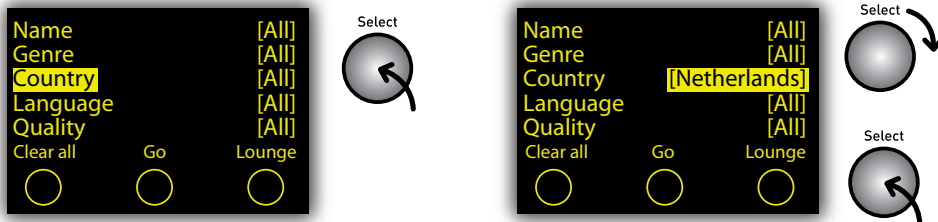For example, change the Country category to The Netherlands (highlight and select 'Country', rotate the Select dial until 'Netherlands' is displayed and then push the Select dial).

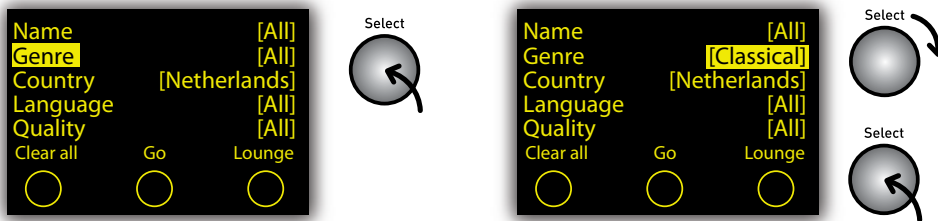


You can select and change as many search categories as you like before you search for matching content, eg, you can also change the genre to 'Classical' (highlight and select 'Genre', rotate the Select dial until 'Classical' is displayed and then push the Select dial).




- 3 When you've selected your chosen search terms, tap  Go to search for all the stations, listen again programmes or podcasts that match your selections. If you want to reset the Search categories to '[All]' tap  Clear all.

- A list of stations, listen again programmes or podcasts that match your criteria is displayed. Highlight and select an item from the list to begin playing.

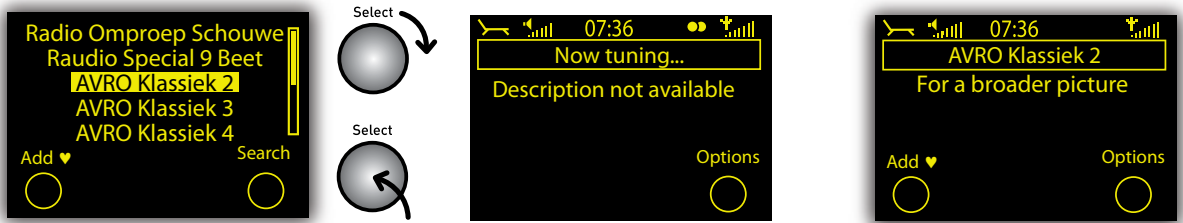

Note If you select 'Name' you can enter the name of a station, programme or podcast, which is handy if you know exactly what you're looking for. Just select 'Name', rotate and push the Select dial to enter all or part of the name you're looking for and tap OK.

Entering a station name

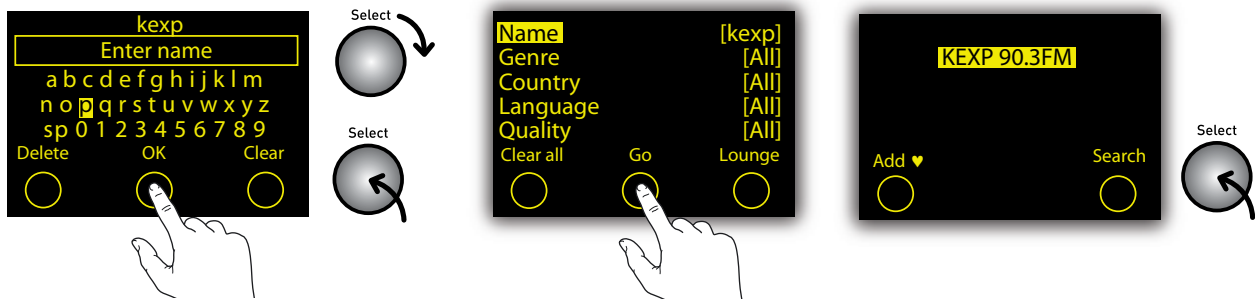

■ To select another station, programme or podcast

- When listening to the station, programme or podcast, rotate the Select dial to display your most recent search results, which are remembered until you perform a new search.
- When your most recent search results are displayed, either highlight and select another item or do one of the following:
 - To perform a new search within the same content category (eg, Stations) tap Search to display the Search screen. Modify or clear your search terms and tap Go to do a new search.
 - To Search within a different content category (either Stations, Listen again or Podcasts) tap to go back to the Lounge Home screen and highlight and select a new content category.

Help! I see 'Station not available'


If you see the message 'Station not available' the radio station may be temporarily off air, or you may be attempting to tune in to a station that has closed for the day or night depending on the time in the country of broadcast.

If the 'Station not available' message persists with a particular station then it's possible that the station has closed down or there is a technical problem with the audio stream. Please let us know by using the '[Contact Us](#)' page at the Lounge and we'll investigate the problem and fix it if possible.


3.3 Opening groups of items

■ To open a group of programmes or podcast episodes

Groups of listen again programmes and podcasts (and Favourites Folders) are preceded by a '+' symbol. For example, all of the listen again programmes in a regular series, or a collection of podcast episodes, may be grouped underneath the title of the series.

- 1 Highlight and select a group title, preceded by a '+' symbol, to view all of the programmes or episodes in that group.
- 2 Highlight and select an individual programme or episode title to begin playback. To go back to the group title, tap .

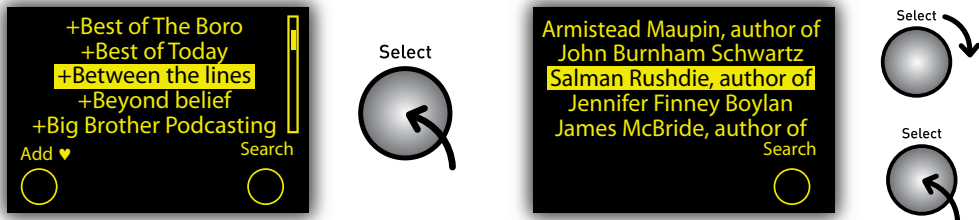

Listening to an item in a group



3.4 Adding and viewing your Favourites

■ To add a station, programme or podcast to your favourites

You can add stations, programmes and podcasts to 'My favourites' for quick and easy access. Anything that you add to 'My favourites' will be listed under 'My EVOKE Flow' at the Lounge (as long as you register and connect your radio to the website). You can log-in at the Lounge to organise your Favourites into separate folders, eg, you could have a separate folder for each member of your household, or separate folders for speech radio and music.

- 1 Perform a new search for content if desired (see [Search for a station...](#)).
- 2 Highlight a station, listen again programme or podcast. If you want to listen before adding the item to your favourites, push the Select dial to tune in, or go to step 3.
- 3 Tap  Add ♥ to add the service to 'My favourites'.
- 4 The 'Add Favourite' confirmation screen appears. Tap  OK to return to confirm and return to the previous screen.

Adding a station to My favourites

